



** Four examples of twelve different basic display types are shown below. For further possible display types ask your technician.

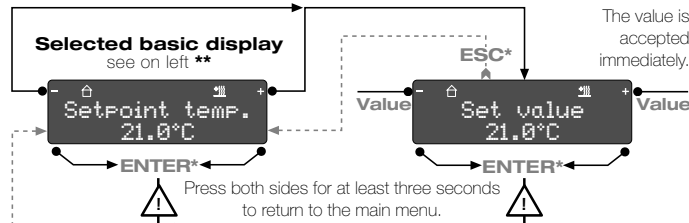

B.IQ push-button with room temperature regulation and display

The following menu list will help you to change the operating mode, to set the temperatures, to program the various functions such as the timer and the week timer and to specify the default settings.

You can find more information in the Internet at www.berker.com

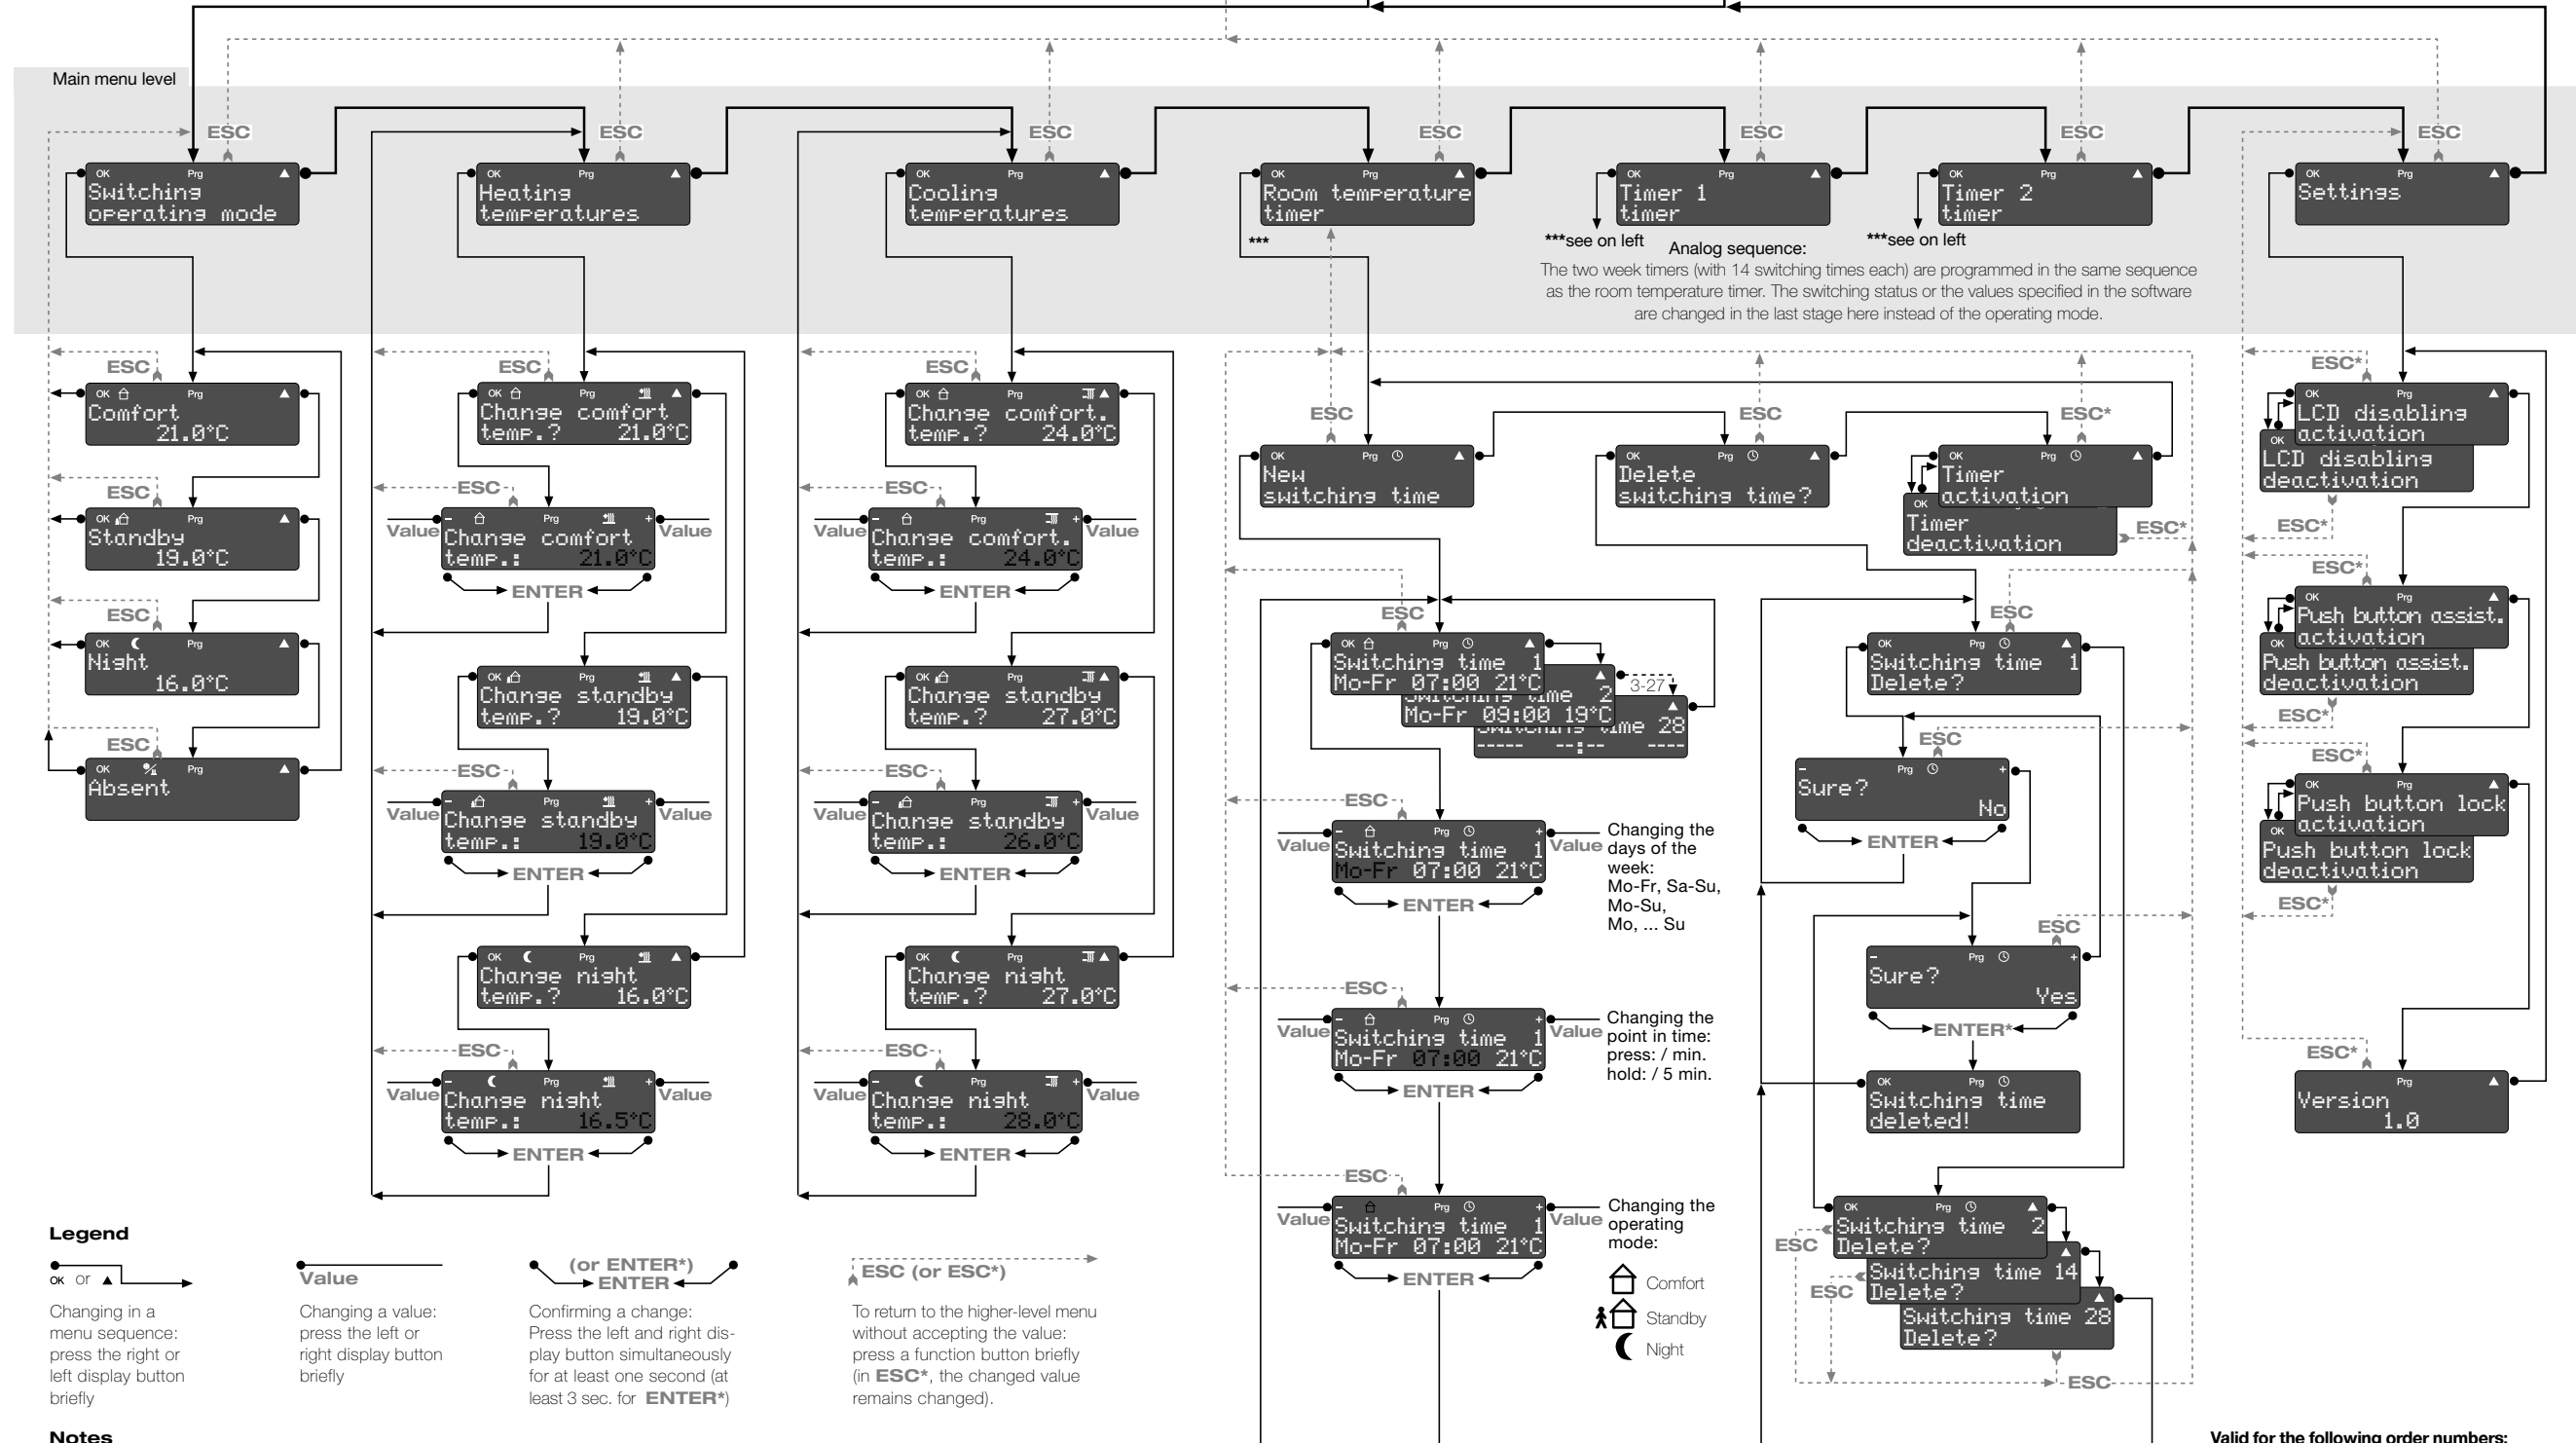

Legend

- Changing in a menu sequence: press the right or left display button briefly
- Changing a value: press the left or right display button briefly
- Confirming a change: Press the left and right display button simultaneously for at least one second (at least 3 sec. for ENTER*)
- To return to the higher-level menu without accepting the value: press a function button briefly (in ESC*, the changed value remains changed).

Notes

The two display buttons are integrated on the outside left and right of the display. The function buttons are located beneath the display. Due to the parameterisation of the B.IQ push-button RTR, it may be that not all menus shown or different values are displayed. Individual menus (e.g. the weekly timer) may be blocked. See the relevant chapters in the Operating Manual for more information.

Valid for the following order numbers:

- 3gang push-button RTR: 75 66 359x
- 4gang push-button RTR: 75 66 459x
- 5gang push-button RTR: 75 66 559x

▲
menu
list